


## Ecophon Focus B

600x600

M03

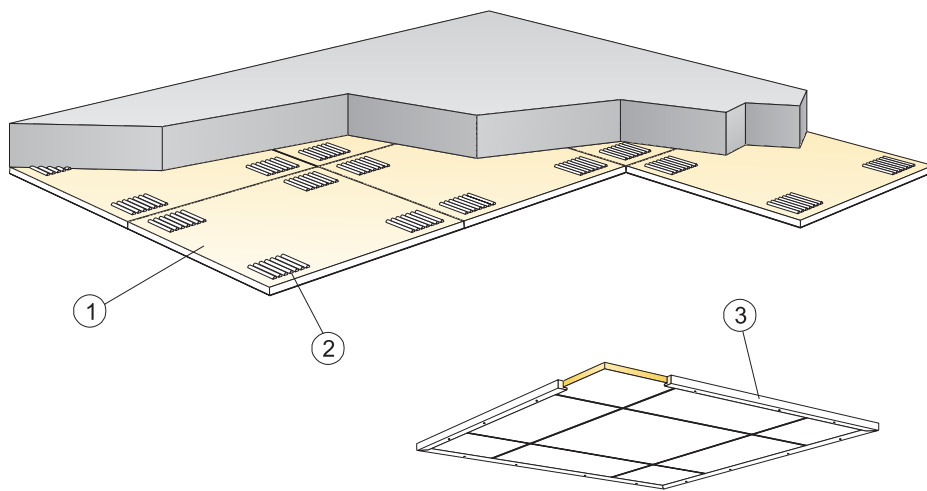


1. Ecophon Focus B

2. Connect Absorber glue




3. Connect Wood trim

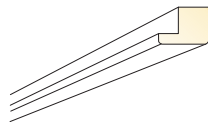

4. Connect Notched spatula





Connect Notched spatula






**x1**

**Ecophon**<sup>®</sup>  
SAINT-GOBAIN




A SOUND EFFECT ON PEOPLE

[www.ecophon.com](http://www.ecophon.com)

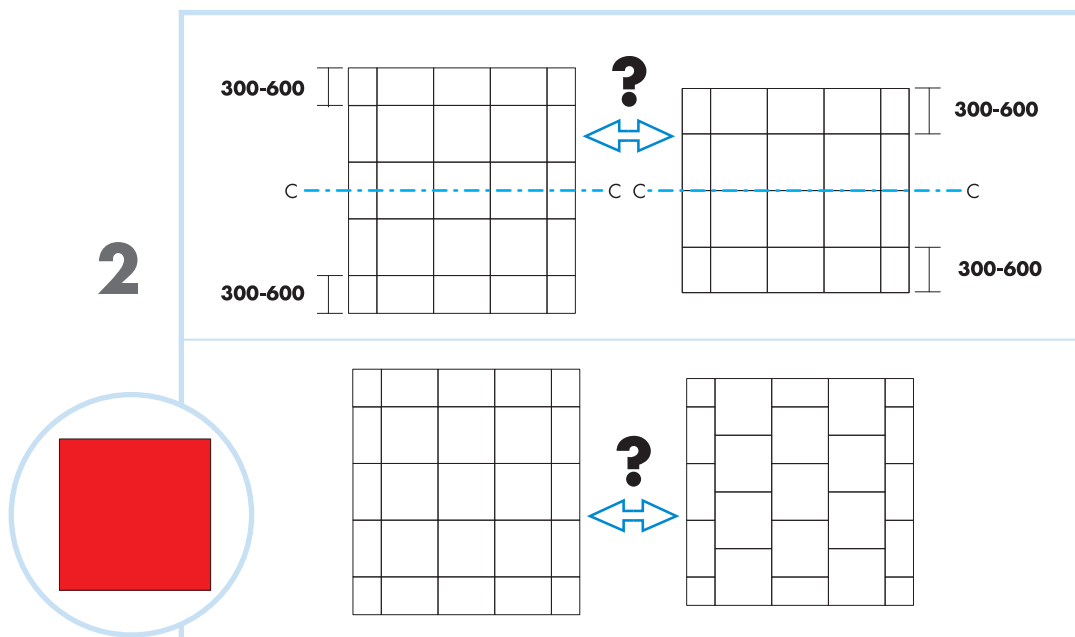
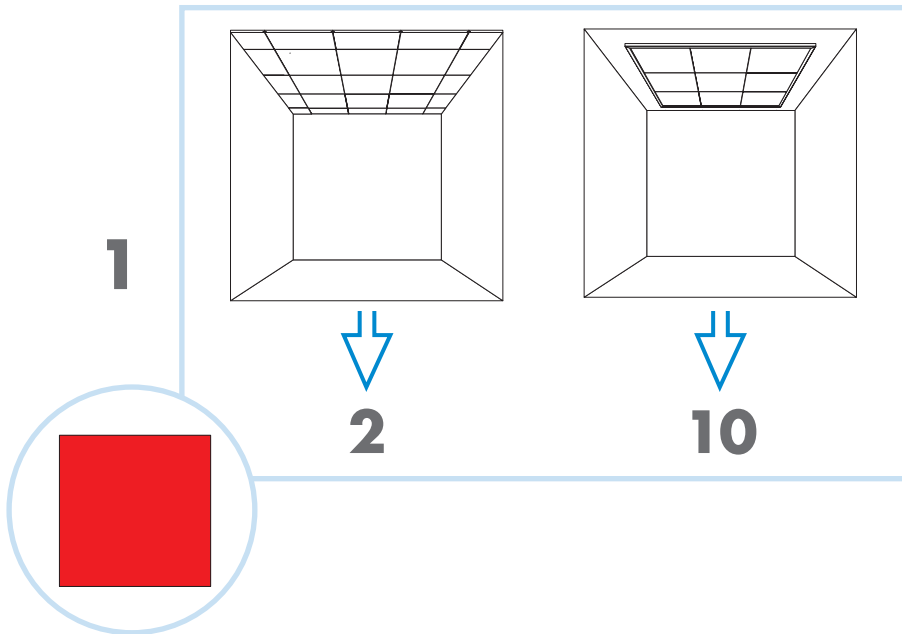


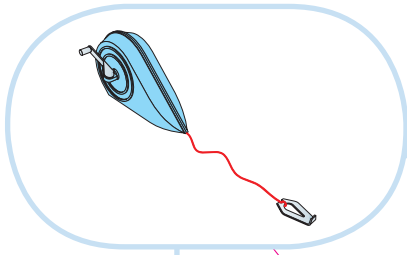


**3**



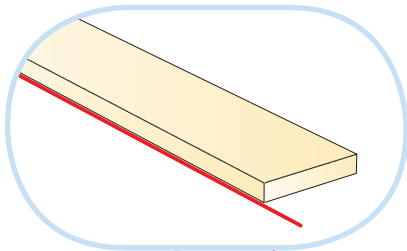
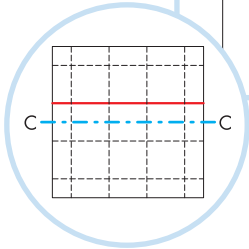
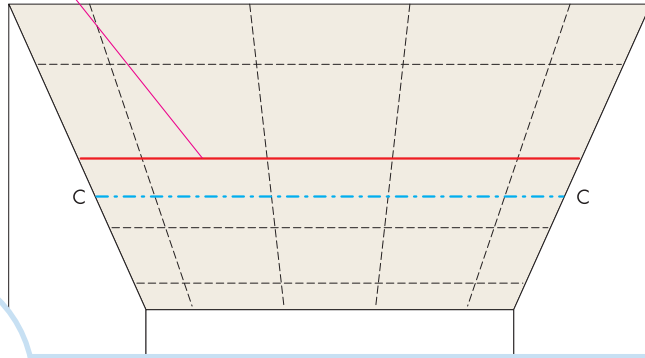


**4**



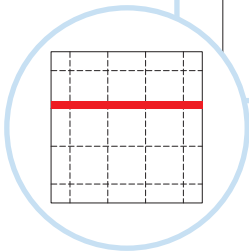
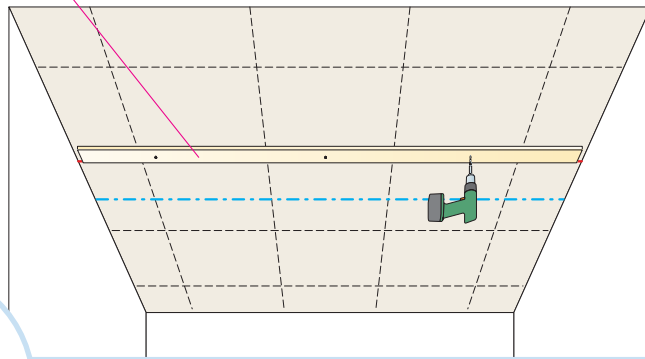



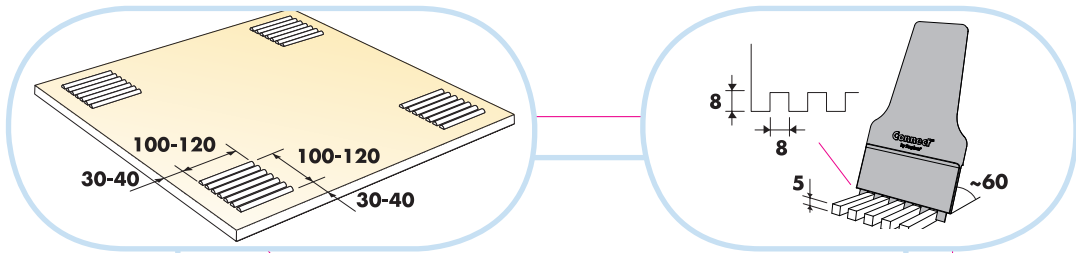



5

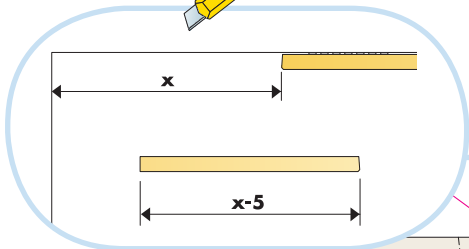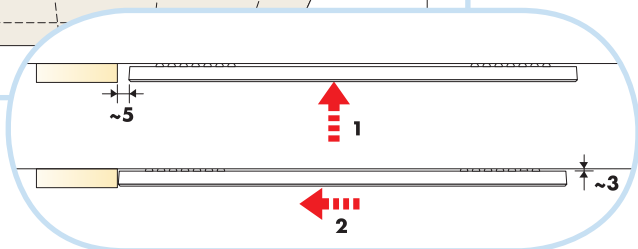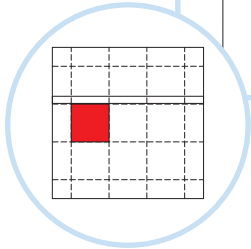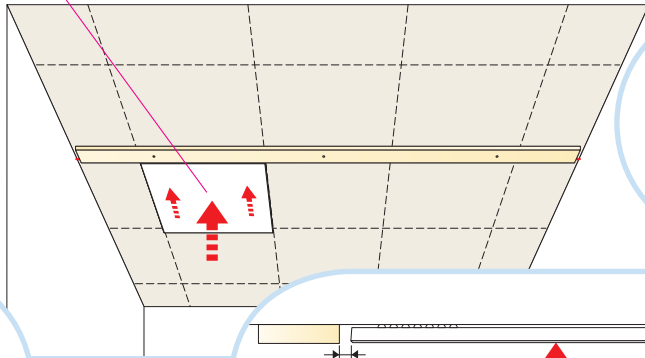


6

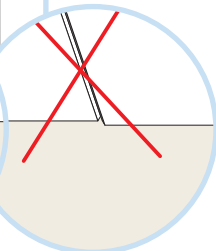
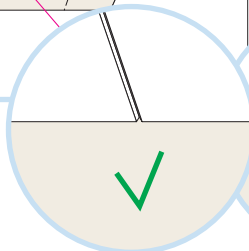
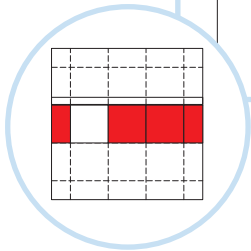
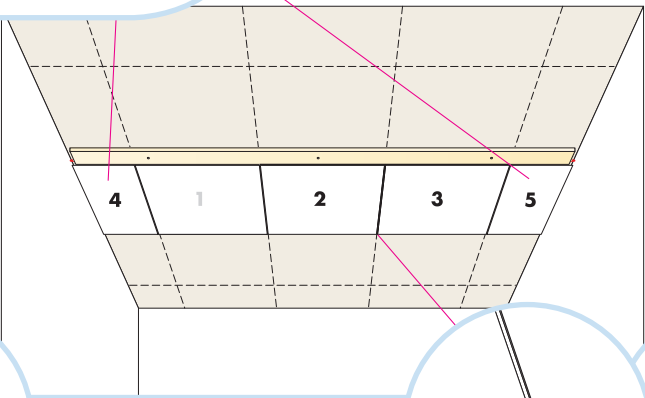


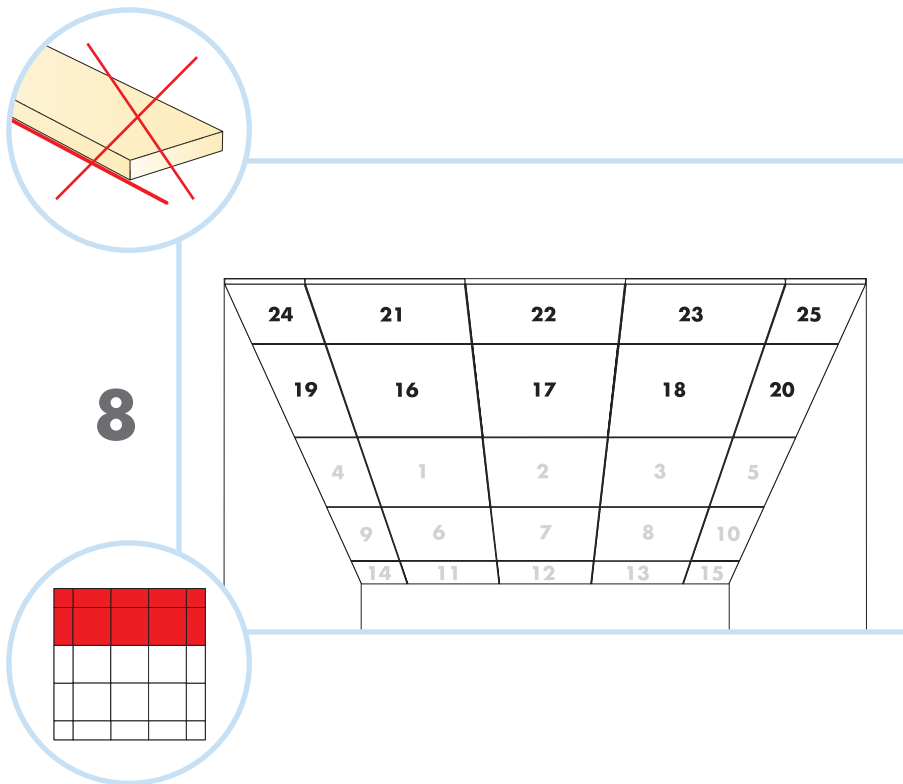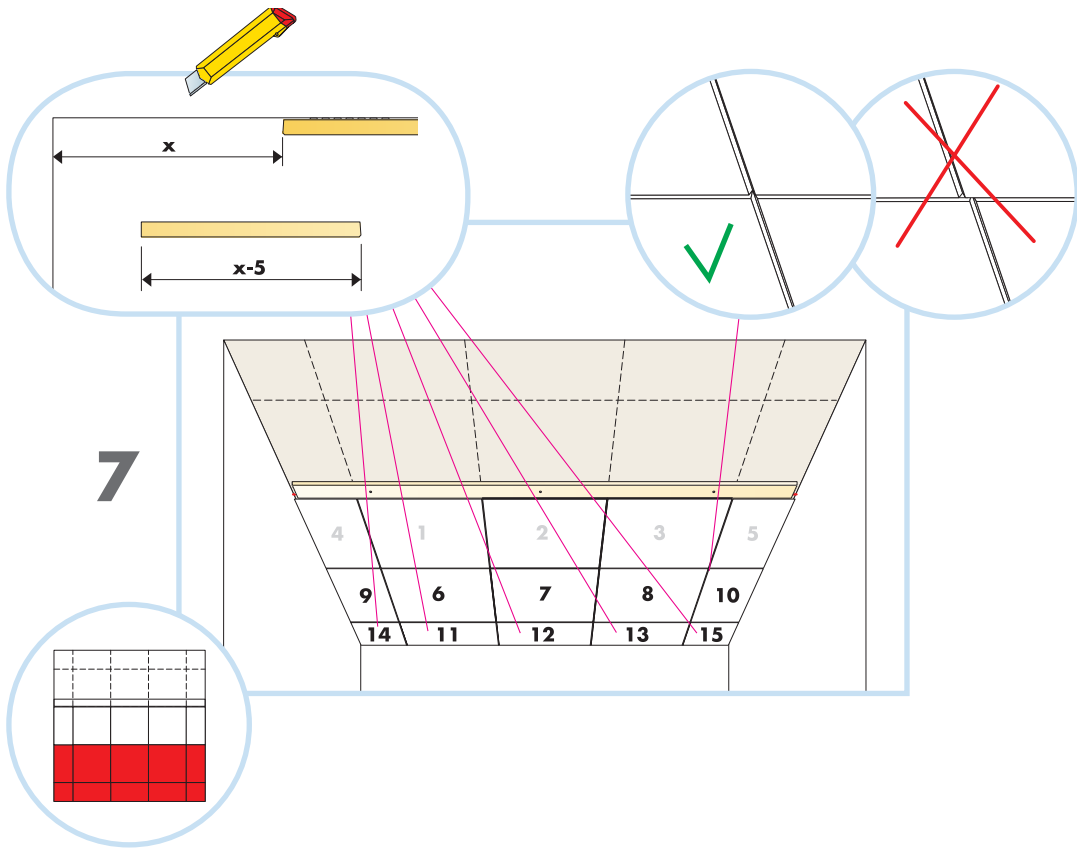




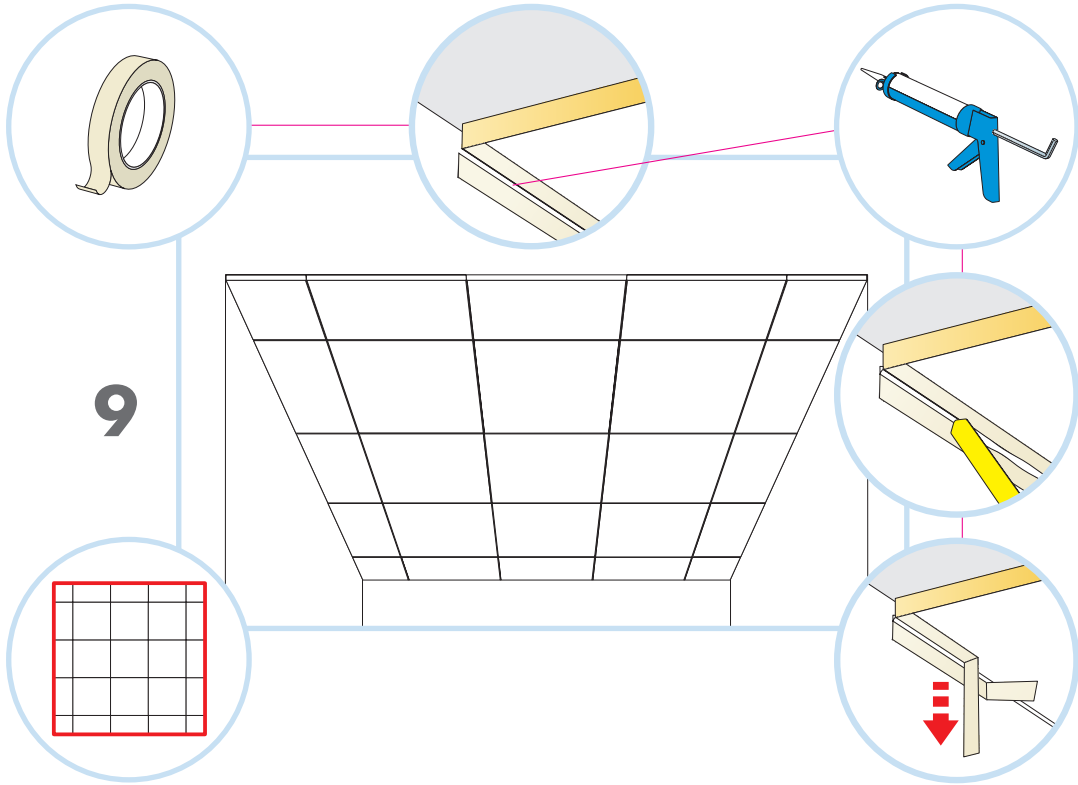


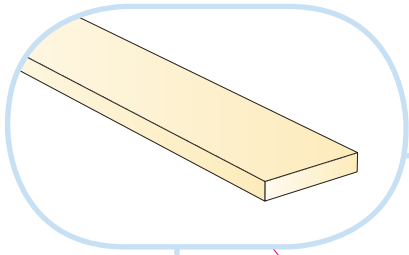

10

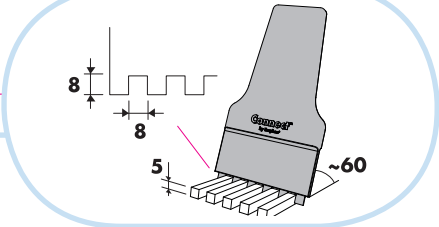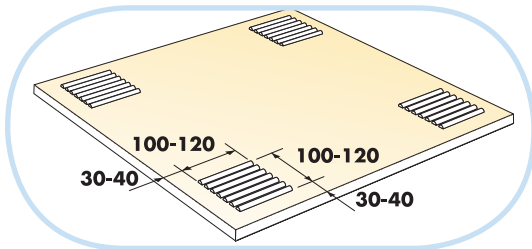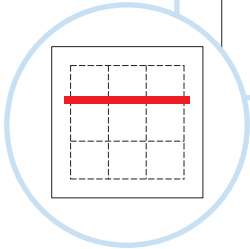
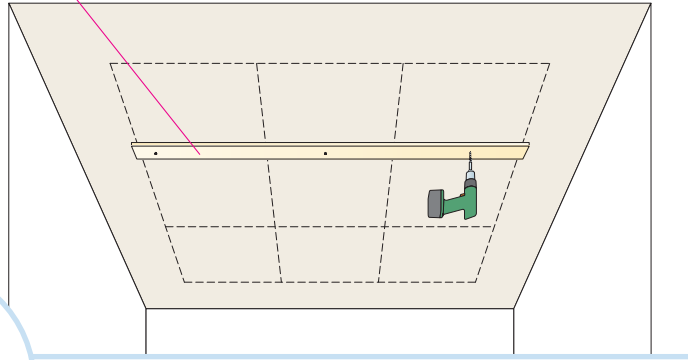




11

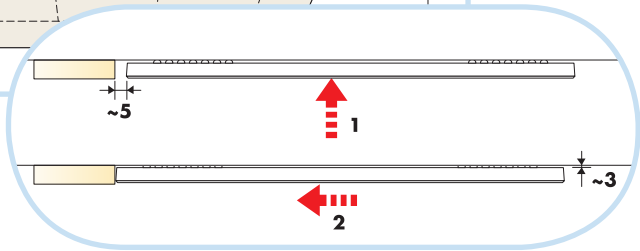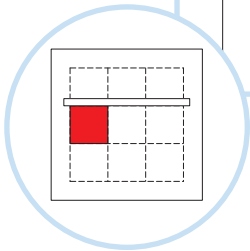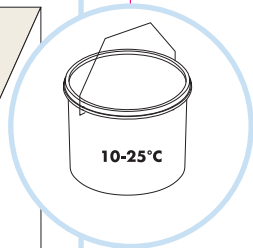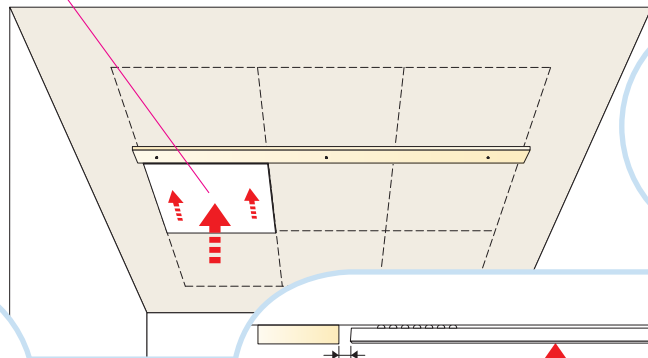



12

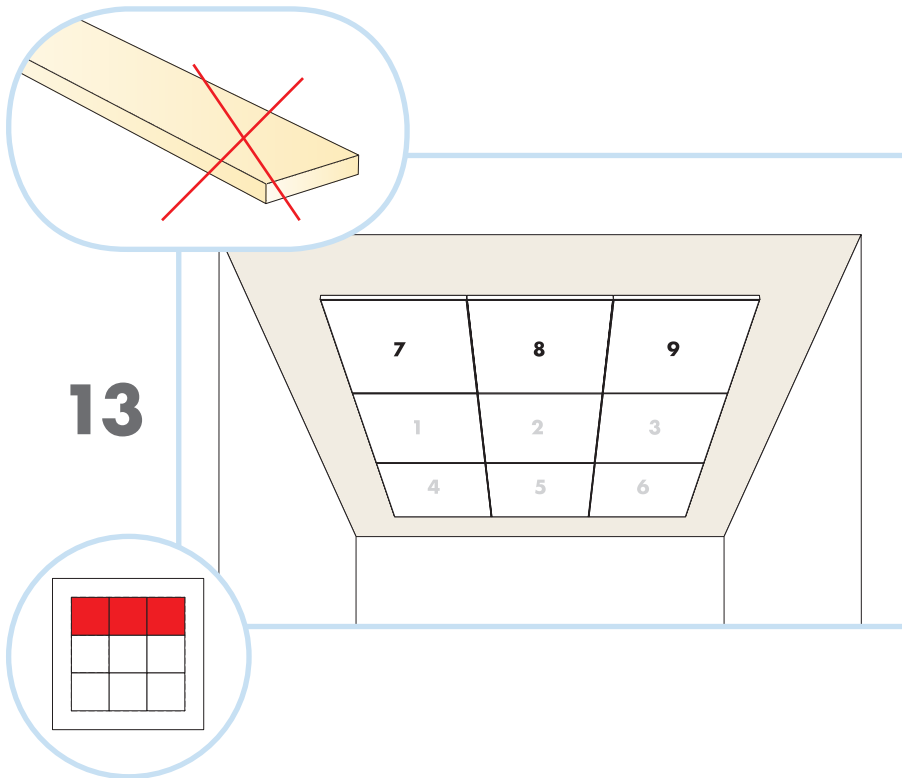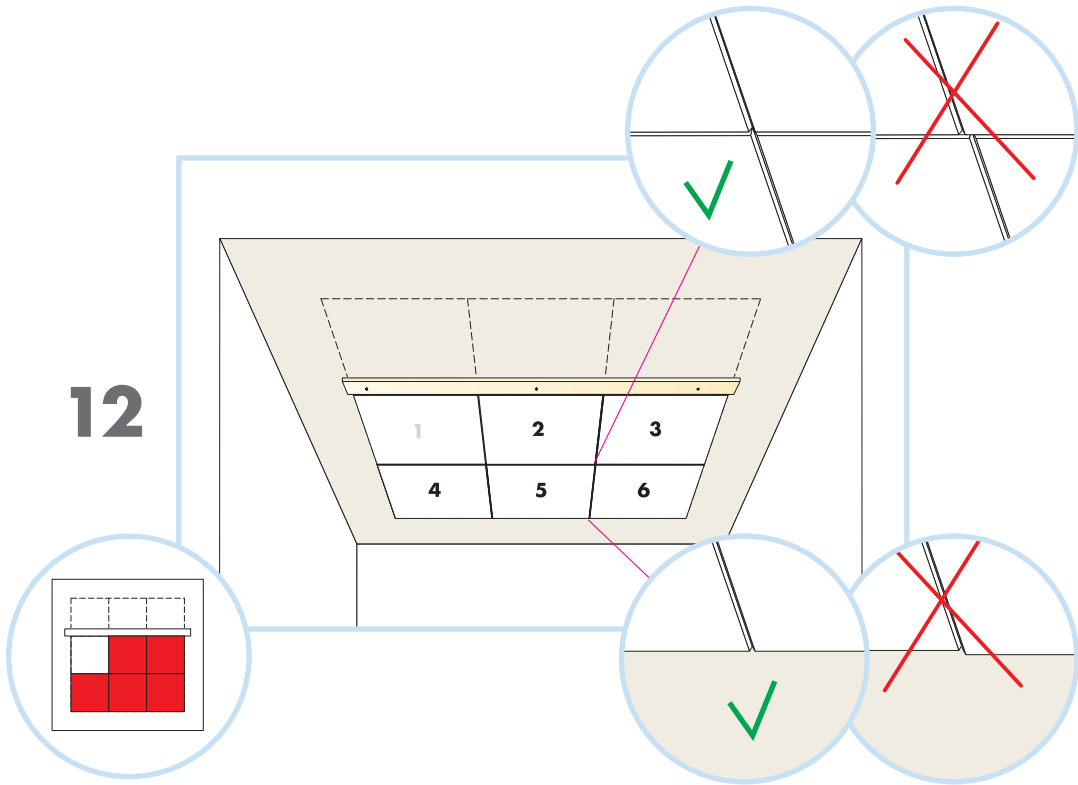

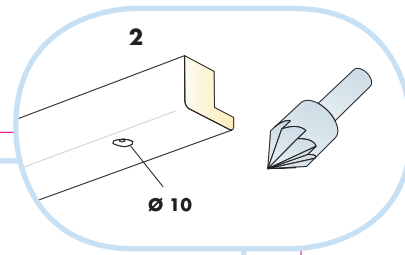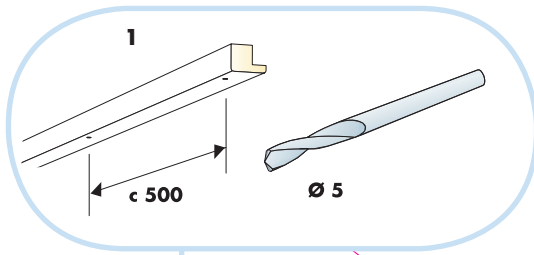

**14**

